
AIRCRAFT PARKING/ DOCKING CHART - ICAO

APRON ELEV
10 M

TWR:	118.6	PRI
	118.725	SRY
GROUND :	121.925	PRI
	121.625	SRY
	121.5	EMERG

AN GIANG/PHU QUOC INTL (VVPQ)

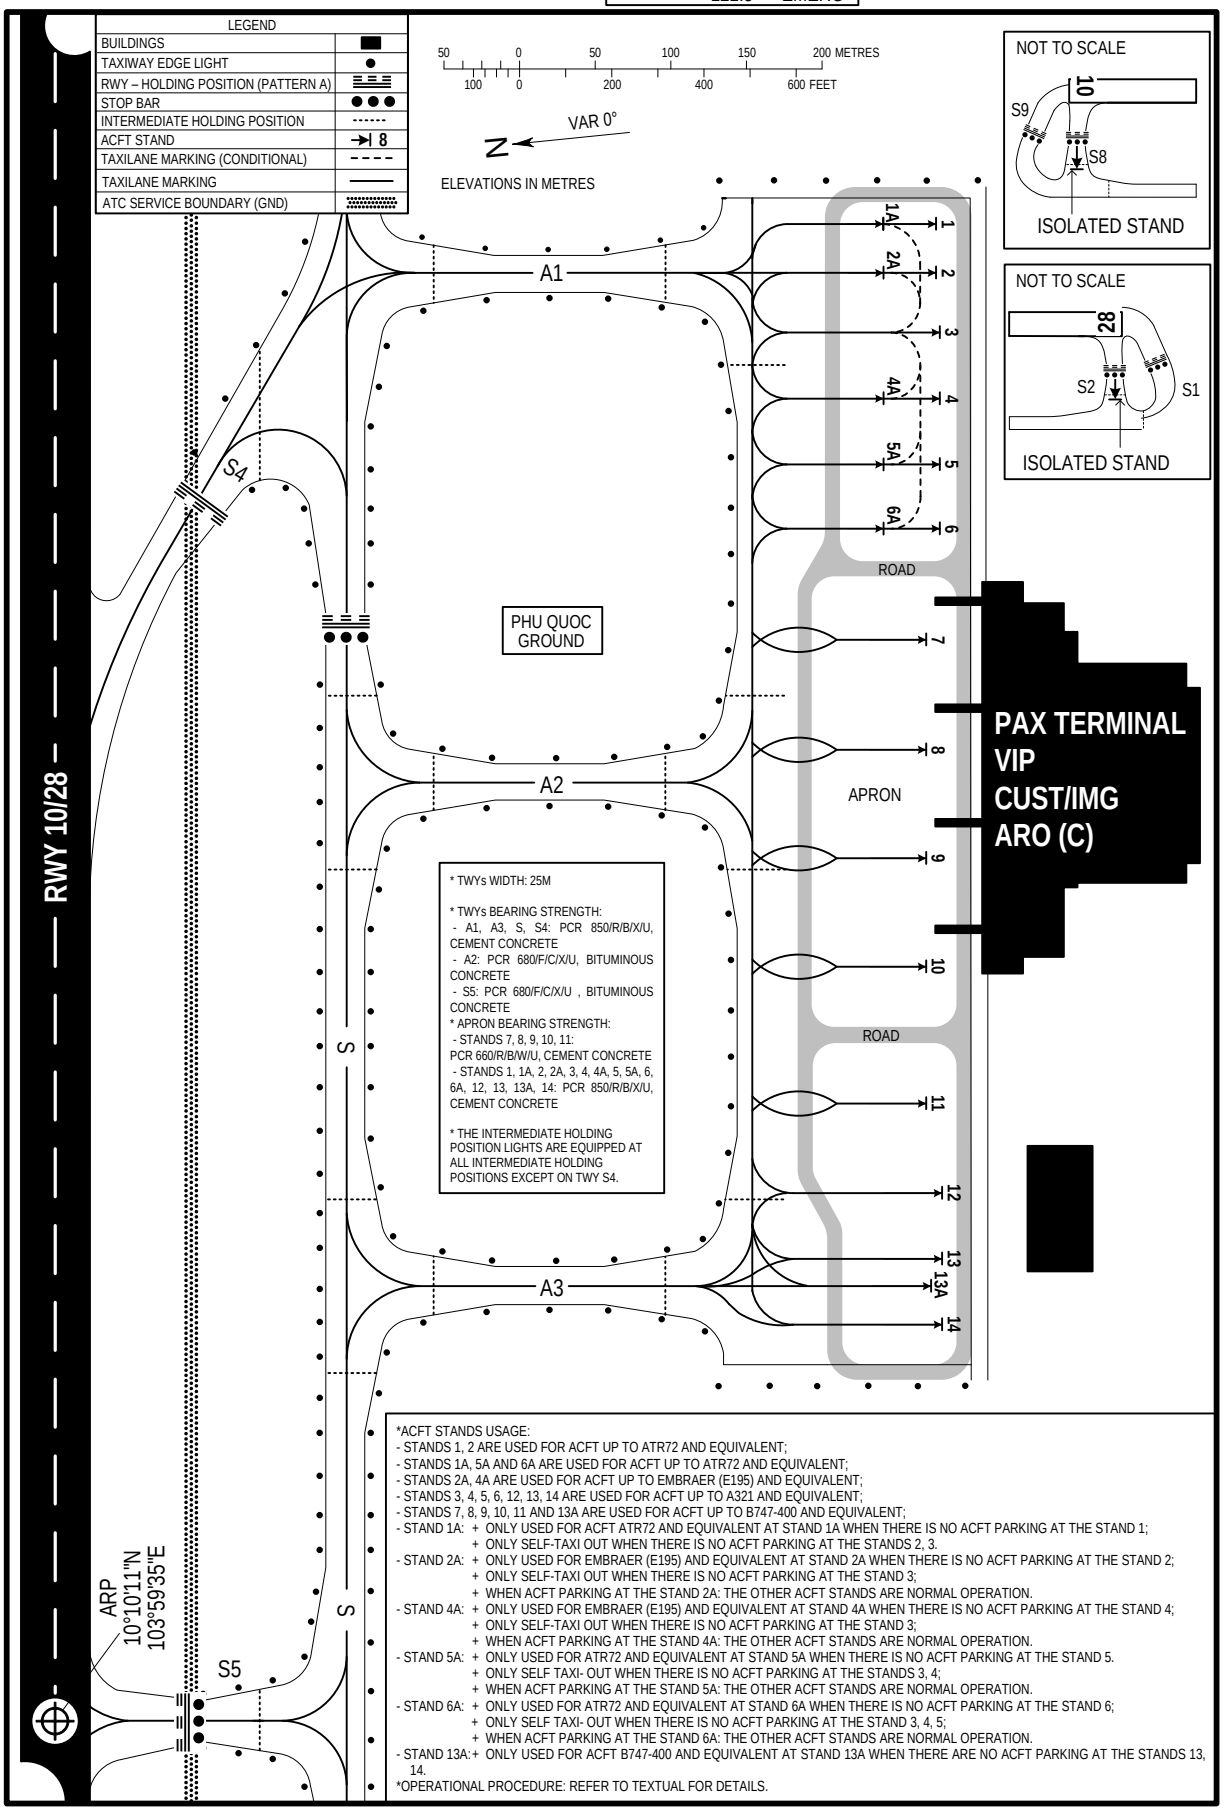

*ACFT STANDS USAGE:
- STANDS 1, 2 ARE USED FOR ACFT UP TO ATR72 AND EQUIVALENT;
- STANDS 1A, 5A AND 6A ARE USED FOR ACFT UP TO ATR72 AND EQUIVALENT;
- STANDS 2A, 4A ARE USED FOR ACFT UP TO EMBRAER (E195) AND EQUIVALENT;
- STANDS 3, 4, 5, 6, 12, 13, 14 ARE USED FOR ACFT UP TO A321 AND EQUIVALENT;
- STANDS 7, 8, 9, 10, 11 AND 13A ARE USED FOR ACFT UP TO B747-400 AND EQUIVALENT;
- STAND 1A: + ONLY USED FOR ACFT ATR72 AND EQUIVALENT AT STAND 1A WHEN THERE IS NO ACFT PARKING AT THE STAND 1;
  + ONLY SELF-TAXI OUT WHEN THERE IS NO ACFT PARKING AT THE STANDS 2, 3.
- STAND 2A: + ONLY USED FOR EMBRAER (E195) AND EQUIVALENT AT STAND 2A WHEN THERE IS NO ACFT PARKING AT THE STAND 2;
  + ONLY SELF-TAXI OUT WHEN THERE IS NO ACFT PARKING AT THE STAND 3;
  + WHEN ACFT PARKING AT THE STAND 2A: THE OTHER ACFT STANDS ARE NORMAL OPERATION.
- STAND 4A: + ONLY USED FOR EMBRAER (E195) AND EQUIVALENT AT STAND 4A WHEN THERE IS NO ACFT PARKING AT THE STAND 4;
  + ONLY SELF-TAXI OUT WHEN THERE IS NO ACFT PARKING AT THE STAND 3;
  + WHEN ACFT PARKING AT THE STAND 4A: THE OTHER ACFT STANDS ARE NORMAL OPERATION.
- STAND 5A: + ONLY USED FOR ATR72 AND EQUIVALENT AT STAND 5A WHEN THERE IS NO ACFT PARKING AT THE STAND 5.
  + ONLY SELF TAXI- OUT WHEN THERE IS NO ACFT PARKING AT THE STANDS 3, 4;
  + WHEN ACFT PARKING AT THE STAND 5A: THE OTHER ACFT STANDS ARE NORMAL OPERATION.
- STAND 6A: + ONLY USED FOR ATR72 AND EQUIVALENT AT STAND 6A WHEN THERE IS NO ACFT PARKING AT THE STAND 6;
  + ONLY SELF TAXI- OUT WHEN THERE IS NO ACFT PARKING AT THE STAND 3, 4, 5;
  + WHEN ACFT PARKING AT THE STAND 6A: THE OTHER ACFT STANDS ARE NORMAL OPERATION.
- STAND 13A:+ ONLY USED FOR ACFT B747-400 AND EQUIVALENT AT STAND 13A WHEN THERE ARE NO ACFT PARKING AT THE STANDS 13, 14.

*OPERATIONAL PROCEDURE: REFER TO TEXTUAL FOR DETAILS.

CHANGE: LOCATION NAME.